





APR TSI K04 Installation Notes

The following items should be noted when installing the APR K04 turbocharger on your TSI vehicle.

- 1) Swap the coolant plugs on the turbo from top to bottom as shown on the outside of the turbocharger (the side that faces the firewall):

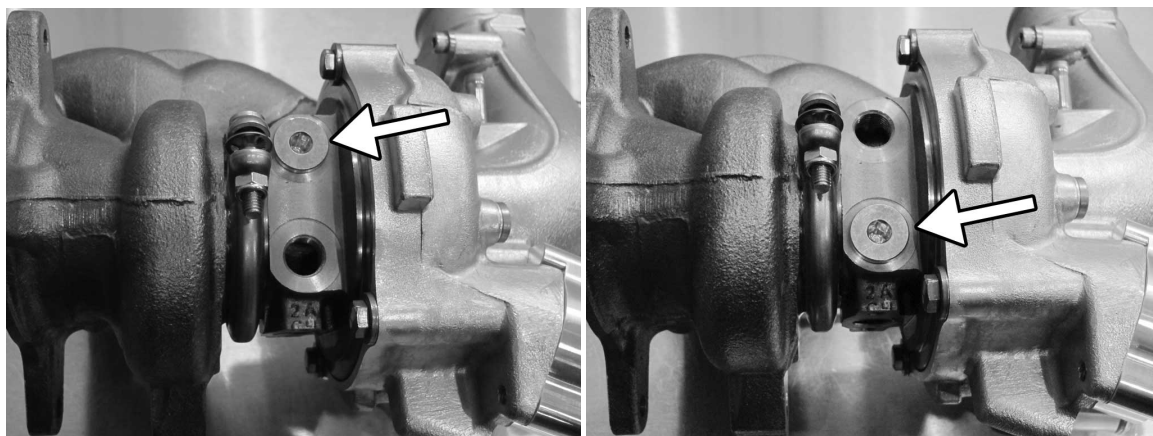

on the inside of the turbocharger (the side that faces the engine), confirm that the plug is in the bottom location:

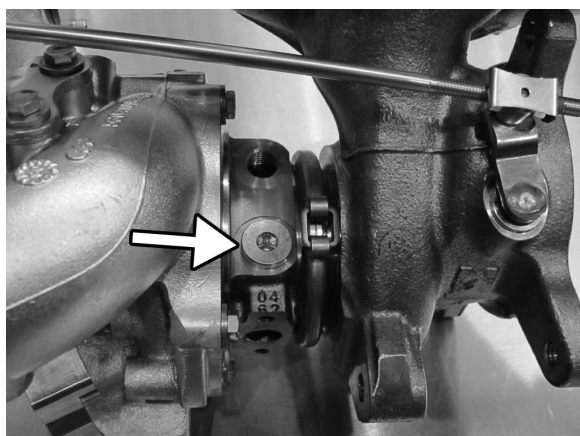

- 2) The DV should be oriented so that the electrical connection is facing up and forward (toward the engine). Install the longer supplied bolt in hole most opposite from the electrical connection.



- 3) When installing the outer (firewall side) coolant line on the turbocharger, be sure to install the thicker, supplied crush washer on the inside of the banjo fitting, between the line and the turbo.

